




Turn the printer on and wait five seconds. The red CHECK PAPER led will be illuminated (if your printer has an optional LCD then it will display PAPER OUT). Begin loading the tickets through the entrance slot with a smooth motion until the ticket stock comes to a stop (at this point the stock is between the thermal head and platen). Keep pressure against the stock and the printer will automatically feed the ticket stock.

NOTE: see Appendix C of [Lemur user manual](#) for loading of Lemur-2 and Lemur-2K printers.




Reverse Adjustable (RADJW & RADJ4)

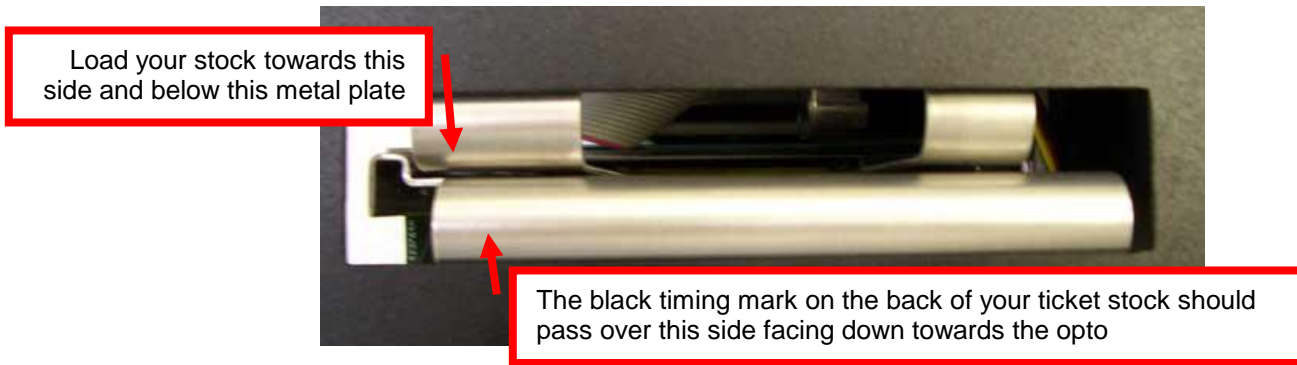

Adjustable (ADJ, ADJW & ADJ2)

Two typical ticket formats and feed directions are shown below. The black timing mark must be facing the [opto sensor](#).

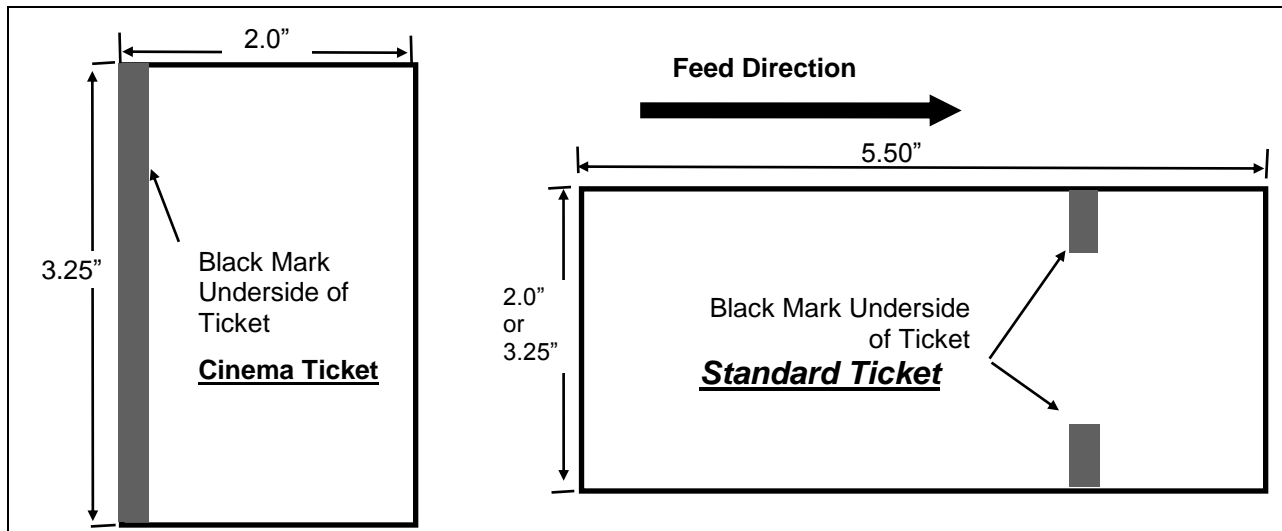

When loading 5.50" long ticket stock the black timing mark should be closest to the leading edge of the ticket (the first part that goes into the printer). When loading 2.0" long cinema ticket stock the black timing mark should be furthest away from the leading edge of the ticket (the first part that goes into the printer).